

# INSTALLATION INSTRUCTIONS

Chevrolet Malibu 1997 - 2003

HD577

## HARDWARE KIT

- 2 – 3/16" Rubber Bonded Fender Washers
- 2 – #10 x 1/2" Pan Head Sheet Metal Screws
- 2 – Expansion Plugs (Square)
- 3 – Large Bumpons
- 2 – 3M Anti-Abrasion Film Pads
- 2 – Black 'E' clips – See supplemental instruction "Installing Black 'E' Clips onto Deflector"

## TOOLS REQUIRED

- 1 – Phillips Screwdriver



## INSTALLATION


1. Be sure that the hood is clean and dry inside and out.
2. Open the hood and center the deflector on it to determine where the deflector will mount.
3. Insert the expansion plugs into the corresponding oval slots in the hood.
4. Install the anti-abrasion film pad directly under where the 'E' clips will mount on the hood. Be sure to wrap the pads over the leading edge of the hood to cover at least 1/2" underneath.
5. Attach the 'E' clips onto the hood by gently pulling the deflector wings towards the leading edge of the hood until the 'E' clips slide over and clip onto the hood edge. Be sure they are fully seated.
6. Re-center the deflector over the expansion plugs installed in step 3. Be sure that the holes in the deflector are centered over the holes in the expansion plugs.
7. Assemble the washers onto the screws (rubber side towards the deflector) and then tighten the screws into the expansion plugs. *See Figure #1. Do not over-tighten.*
8. Attach one of the bumpons at the center approx. 3" back from the leading edge of the hood. Then attach one at each end, directly behind each of the 'E' clips (already attached on the deflector), approx. 2" back from the front edge of the hood. *See Figure #2. Attention: The bumpons must be installed on the hood not on the deflector!!!* If the bumpons are installed on the deflector, they will wear through the paint.
9. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

**Note:** Do not pull on the deflector when opening or closing the hood.


## CARE INSTRUCTIONS

Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the deflector is secure. Avoid using automatic car washes. Do not pull on the deflector when opening or closing the hood.

**FIGURE #1: HARDWARE ASSEMBLY**

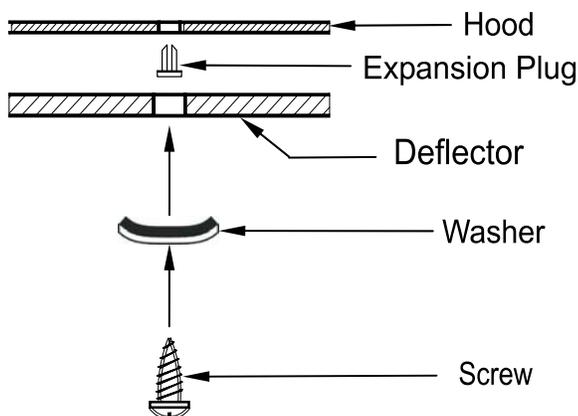

**FIGURE #2: BUMPON LOCATION**

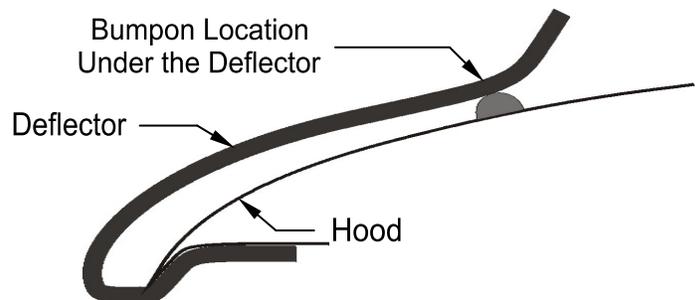

Thank you for purchasing a **FORM FIT** hood deflector.  
Retain this sheet for care instructions and kit information.



Rev6.070911

# INSTRUCTIONS D'ASSEMBLAGE

Chevrolet Malibu 1997 - 2003

HD577

## Sachet de fixations

- 2 – Rondelles en caoutchoucs
- 2 – Vis pour tôle à tête fraisée (n° 10 x ½ po.)
- 2 – Bouchons expansibles carrés
- 3 – Grosses butées
- 2 – Tampons anti-abrasifs
- 2 – Agrafes noires « E » – Voir l'instruction supplémentaire « installer le noir E' agrafes sur le déflecteur »

## Outils requis

- 1 – Tournevis à embout étoilé (Phillips)



## Installation


1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur.
2. Ouvrir le capot. Centrer le déflecteur et déterminer où le déflecteur sera installé.
3. Insérer les bouchons expansibles dans les fentes ovales correspondantes du capot.
4. Installer un tampon anti-abrasif directement derrière chaque agrafe « E » qui vont se fixer au capot. S'assurer d'envelopper les tampons au bord avant du capot pour couvrir au moins ½ pouce en dessous du capot.
5. Attacher les agrafes « E » au capot en tirant prudemment sur les ailes du déflecteur vers le bord avant du capot jusqu'à ce qu'elles se glissent par-dessus et s'agrafent au rebord du capot. S'assurer que les agrafes « E » sont tous bien installées.
6. Re-centrer le déflecteur au-dessus des bouchons expansibles, installés à l'étape 3. S'assurer que les trous du déflecteur sont centrés avec les trous des bouchons expansibles.
7. Assembler les écrous-douilles dans les vis (côté en caoutchouc vers le déflecteur) et serrer les vis dans les bouchons expansibles. Voir l'illustration n° 1. **Ne pas trop serrer.**
8. Installer une des butées au centre du capot à approximativement 3 pouces derrière le bord avant du capot. Installer une butée directement derrière chaque agrafe « E » (déjà fixées au déflecteur), approximativement à 2 pouces derrière la bordure avant du capot. Voir l'illustration n° 2. **Attention: Les butées doivent être posées sur le capot et non sur le déflecteur !!** Si les butées sont installées sur le déflecteur, elles useront la peinture.
9. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.

**Important: Ne jamais se servir du déflecteur pour ouvrir ou fermer le capot.**


## Instructions pour l'entretien

**Nettoyer le déflecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants.** S'assurer périodiquement que les butées sont toujours en place et que le déflecteur est toujours bien retenu. **Éviter de laver le véhicule dans un lave-auto automatique.** Ne pas tirer sur le déflecteur pour ouvrir ou fermer le capot.

### Illustration n° 1 : Assemblage

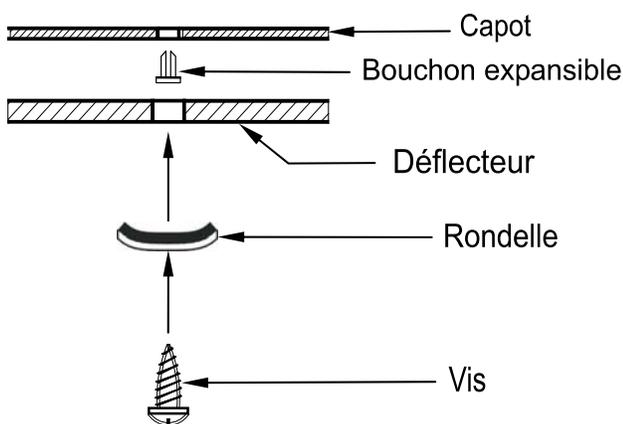

### Illustration n° 2 : Emplacement des butées

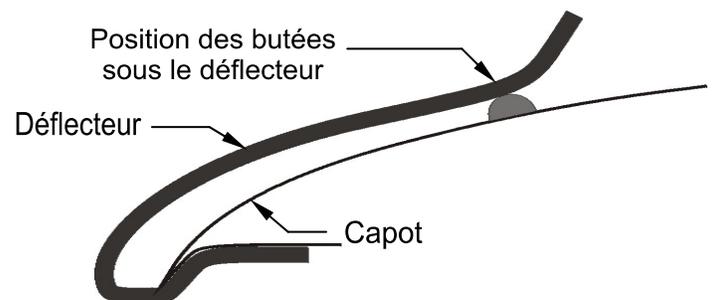

Merci de vous êtes procuré un déflecteur **FORM FIL**. Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.